


4. INSTRUCTIONS FOR THE END USER

The instructions contained in this section are for unqualified personnel.

4.1 INITIAL OPERATION

4.1.1 DESCRIPTION OF THE ELECTRONIC CONTROL PANEL

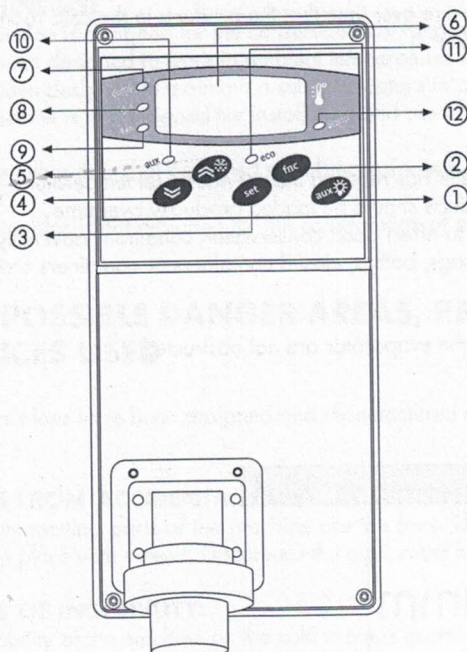

NOTE

Always keep closed the plastic cover!

- | | |
|---------------------|---|
| ① AUX | Turns ON / turns OFF |
| ② FNC | Exit function |
| ③ SET | Machine status menu (short pressure), parameter programming menu (extended pressure) |
| ④ DOWN | Go through the menu voices, decreases the values |
| ⑤ DEFROST/UP | Activate defrost / go through the menu voices, increase the values |
| ⑥ DISPLAY | Display parameters values, breakdowns codes and temperature |
| ⑦ COMPRESSOR | Lighted for active cold / blinking for delay, protection or activation blocked |
| ⑧ DEFROST | On for ongoing defrost / blinking for manual activation |
| ⑨ FAN | Lighted for evaporator fans in function |
| ⑩ AUX | Lighted for active output |
| ⑪ ECO | Lighted for set-point inserted is displayed, blinking when reduced setpoint is displayed. |
| ⑫ ALARM | Lighted for active alarm / blinking for tacit alarm |

4.1.2 STARTING THE MACHINE

Press the button ① for 2 seconds. A few minutes after the switch has been enabled, the compressor will begin to operate.

4.1.3 TEMPERATURE SETTING

The machine operation is fully automatic in that the manufacturer has already set the "set point" temperature (cold room temperature). To change this setting, proceed as follows:

- 1) **PRESS** two times the SET button: the current setting for the "set point" temperature will then be displayed.
- 2) **SELECT** the desired temperature setting for the cold room from within the limits pre-defined by the manufacturer.
- 3) **CHANGE** the set point setting by pressing the UP button to increase the value and the DOWN button to decrease it. Once the setting has been changed press the SET button once more.